

 
DigiCard Installation - Loewe TV Sets

Follow these instructions to install the DigiCard in a Loewe TV set. Please ensure your TV set is connected to the cable network and plugged in to the mains socket. You will need the DigiCard case provided with this manual for the installation, as well as the «Digital TV information letter». This letter contains all required installation parameters.

All items of information regarding hardware and software can be found in the operating instructions of your TV set. The software and each installation stage can vary depending on the model and year of manufacture. upc cablecom assumes no liability whatsoever for any faults on your TV set. In that case, kindly contact the manufacturer directly.




STEP 1

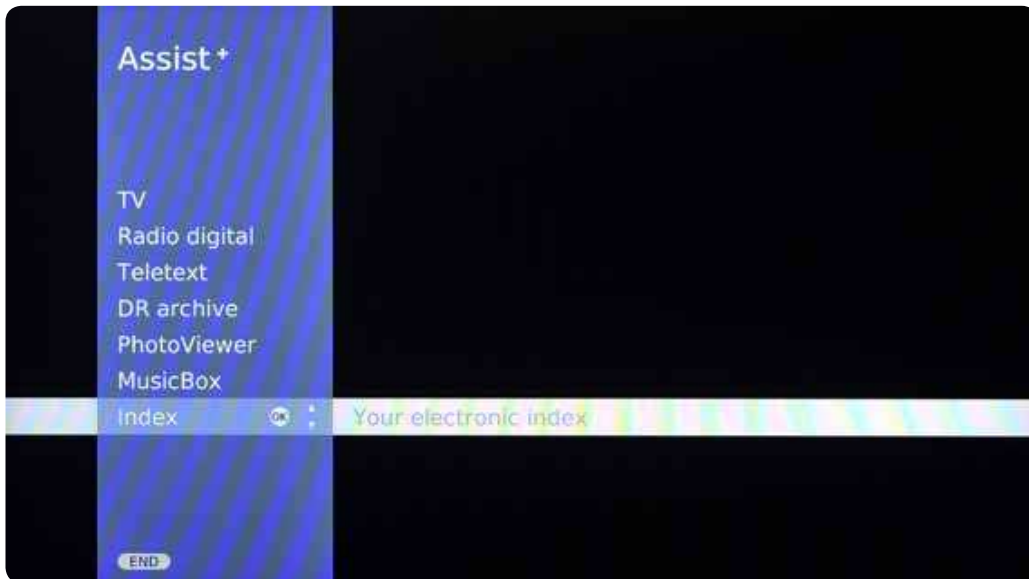

- **Do not** insert the DigiCard into your TV set **yet**. Switch on the TV.
- Press the **«assist»** button on your remote control. The menu appears.
- Select the menu item **«Index»** using your remote control. Confirm your selection by pressing **«OK»**.

 STEP 2

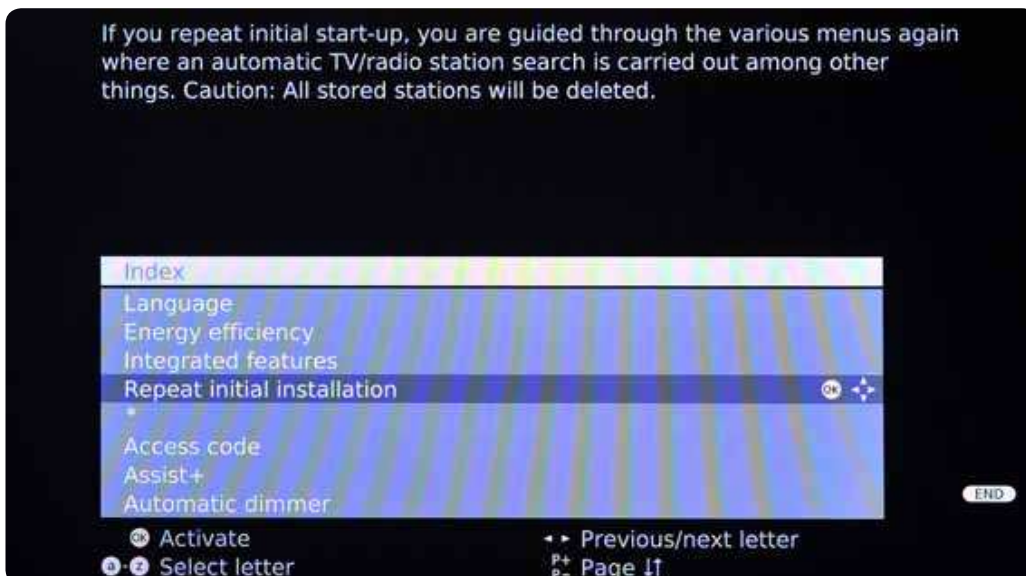


- Select the menu item **«Repeat initial installation»** using your remote control. Confirm your selection by pressing **«OK»**. **Please note that any current settings will be lost.**

STEP 3




- Select the desired **country**. Confirm your selection by pressing **«OK»**.
- Select the desired **language**. Confirm your selection by pressing **«OK»**.

 STEP 4

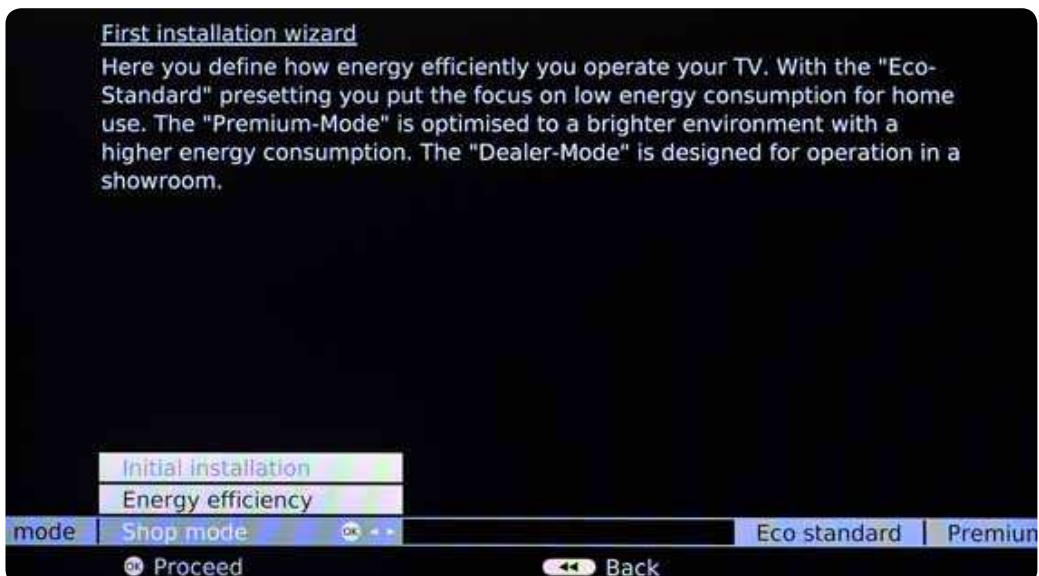

- Select the menu item **«Energy efficiency»**. Confirm your selection by pressing **«OK»**. Further information regarding the energy settings can be found in the operating instructions of your TV set.

 STEP 5

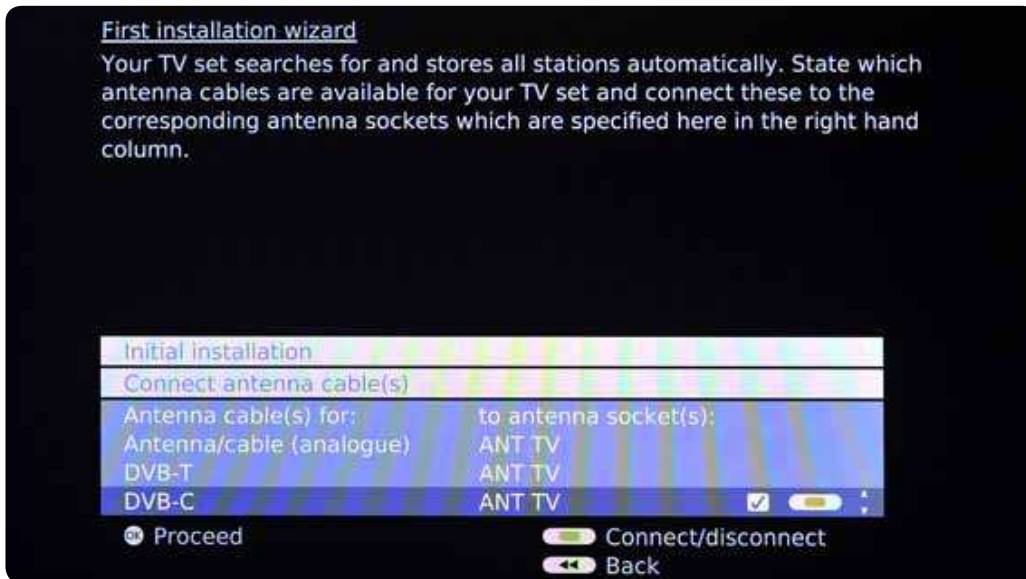

- Select the option «DVB-C» via the menu item «Connect antenna cables». Confirm your selection by pressing «OK».

STEP 6



 
- Select the menu item «Subtitle and audio languages», then select your desired languages. If you wish to keep the manufacturer's default settings, this step can be ignored. [Further information regarding the available languages can be found in the operating instructions of your TV set.](#)

STEP 7



- Select the menu item «**Logical Channel Number**», then select your desired settings. If you wish to keep the manufacturer's default settings, this step can be ignored. [Further information regarding the Logical Channel Number](#) can be found in the operating instructions of your TV set.

STEP 8

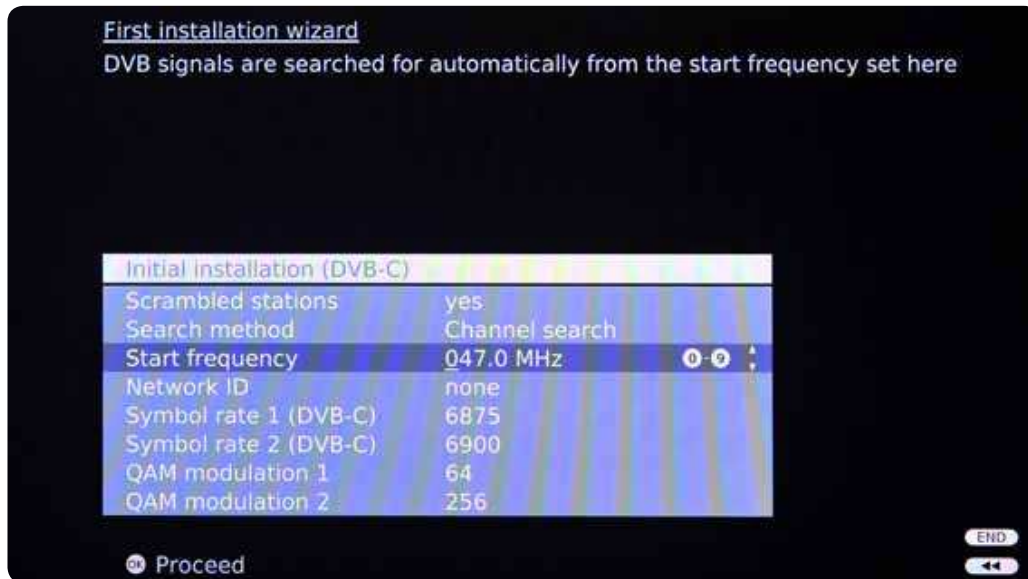

- Ensure you have the **Digital TV information letter** at hand, which was provided with your DigiCard. You will find all required parameters on the Digital TV information card.
- Select the various options using the arrow keys on your remote control and enter the numerical values using the number pad.

Encoded channel?	Yes
Search procedure	Channel search
Start frequency (MHz or KHz)	Both codes can be found in the information letter.
Network ID	The code can be found in the information letter.
Symbol rate 1 Symbol rate 2	The code can be found in the information letter.
QAM modulation 1 QAM modulation 2	The code can be found in the information letter.

 
- Confirm your entries by pressing **«OK»**.

STEP 9



- Press «OK» to proceed. The automatic search process will then start.

STEP 10

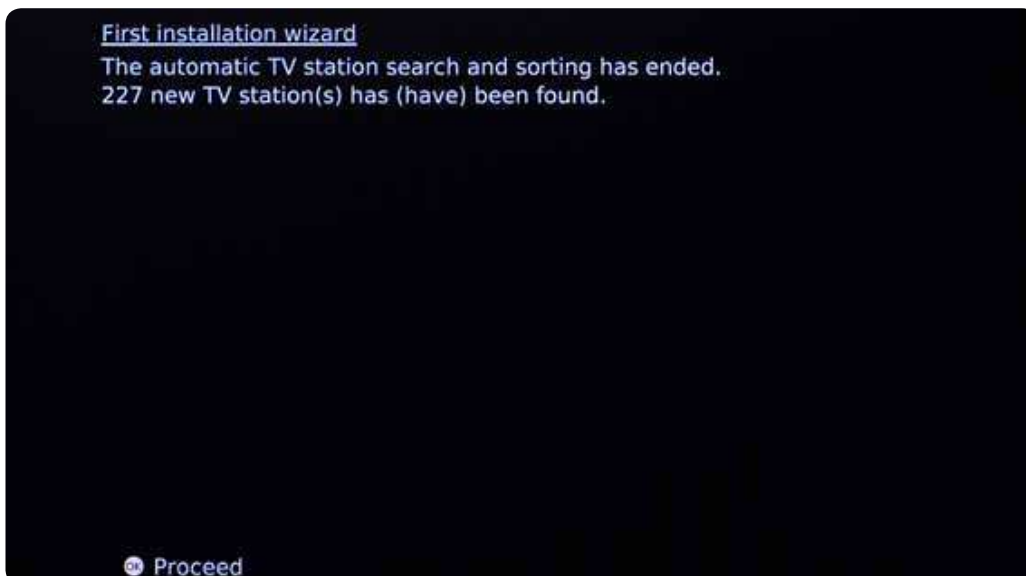

- Wait until the channel search process has finished.
- Press «OK» to proceed.

Please note that this process can take up to 10 minutes to complete.

STEP 11

First installation wizard: Structure of TV station list

The TV stations found in the automatic search were divided into appropriate station blocks according to the previously selected antenna cables (signal sources). The stations can only be reorganised later within these blocks. The block with the stations of your favoured signal source is at the top of the station list.

<u>Signal source</u>	<u>Associated station numbers</u>
DVB-C	1-1100

 Proceed

- Wait until Structure of TV channel overview appears.
- Press «OK» to proceed.

STEP 12

 
First installation wizard

The automatic radio station search and sorting has ended.
132 new radio station(s) has (have) been found.

 Proceed


- Wait until the radio station search process has finished.
- Press «OK» to proceed.

STEP 13

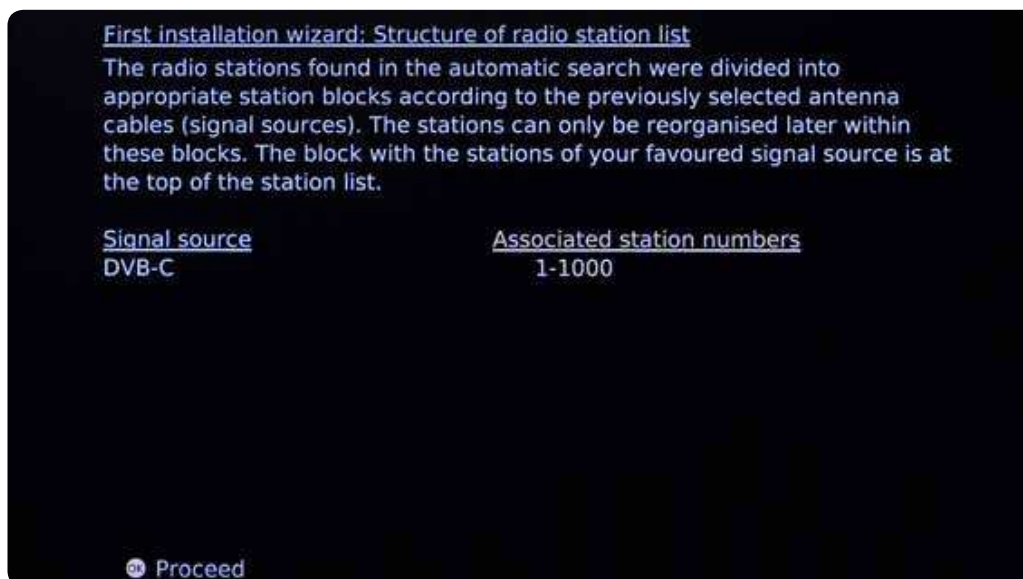

- Wait until Structure of radio station overview appears.
- Press **«OK»** to proceed.

 STEP 14

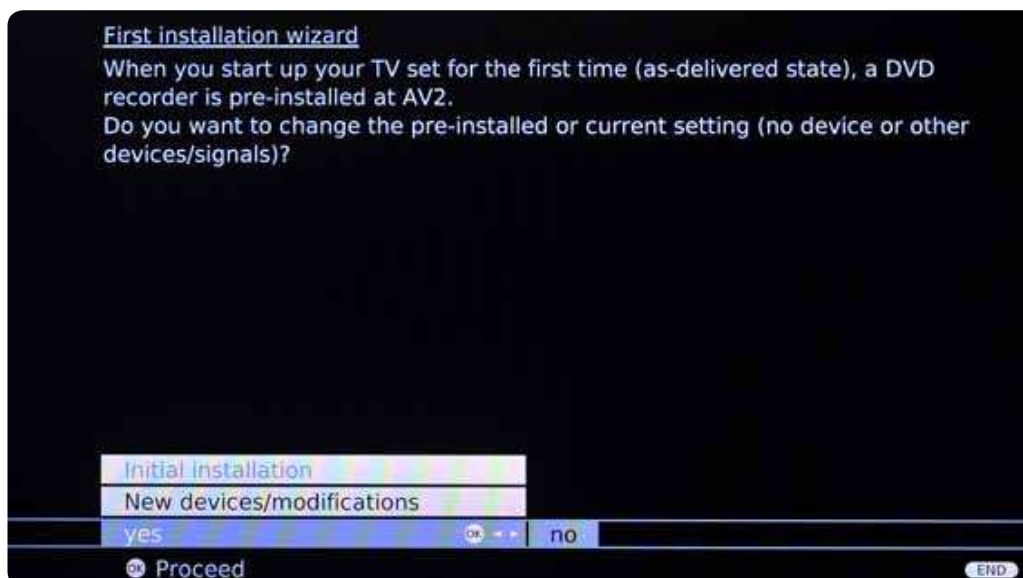

- Select the menu items **«Age restriction settings»**, **«New devices/modifications»** and **«Sound settings»**, then select your desired settings. If you wish to keep the manufacturer's default settings, this step can be ignored. [Further information can be found in the operating instructions of your TV set.](#)

STEP 15



- **Now insert the DigiCard** and follow the instructions provided in the DigiCard manual.
- Switch your TV set off and then back on.
- Wait for the automatic authentication process to finish.
- The first channel will be configured automatically.

You can now start enjoying some great entertainment with Digital TV.