

 
DigiCard Installation - Samsung TV Sets

Follow these instructions to install the DigiCard in a Samsung TV set. Please ensure your TV set is connected to the cable network and plugged in to the mains socket. You will need the DigiCard case provided with this manual for the installation as well as the «Digital TV information letter». This letter contains all required installation parameters.

All items of information regarding hardware and software can be found in the operating instructions of your TV set. The software and each installation stage can vary depending on the model and year of manufacture. upc cablecom assumes no liability whatsoever for any faults on your TV set. In that case, kindly contact the manufacturer directly.



STEP 1

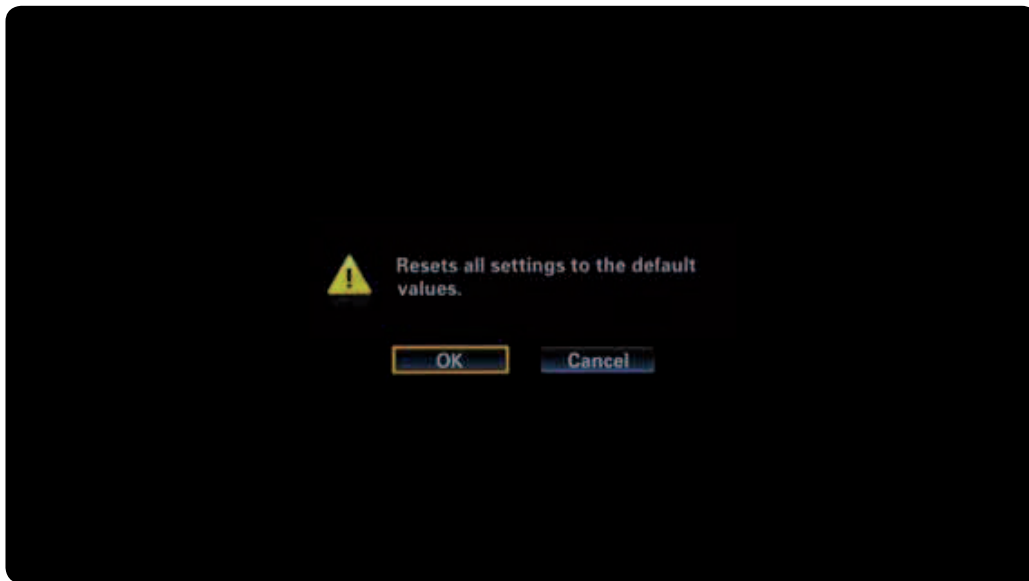

- **Do not** insert the DigiCard into your TV set **yet**. Switch on the TV.
- Press the **«EXIT»** button on your remote control for approximately 20 seconds. The following message will appear: **«Restore all default settings»**
- Select **«OK»** using your remote control. Confirm your selection using the appropriate button. **Please note that any current settings will be lost.**
- The TV set will switch itself off automatically. Turn the TV back on after approximately 1 minute.

STEP 2



- Select the desired **language**. Confirm your selection using the appropriate button.

STEP 3



- Select the option **«Home Use»** via the menu item **«Operation mode»**. Confirm your selection using the appropriate button.

STEP 4



- Select the desired **country**. Confirm your selection using the appropriate button.

STEP 5



- Select the option **«Cable»** via the menu item **«Antenna type»**. Confirm your selection using the appropriate button (Start).

STEP 6



- Select the option «Digital» via the menu item «Channel type». Confirm your selection using the appropriate button (Start).

STEP 7



- Ensure you have the **Digital TV information letter** at hand, which was provided with your DigiCard. You will find all required parameters on the Digital TV information card.
- Select the various options using the arrow keys on your remote control and enter the numerical values using the number pad.

Search mode	Fast
Network settings	Manual
Start frequency (MHz or KHz)	Both codes can be found in the information letter.
Network ID	The code can be found in the information letter.
Symbol rate 1 Symbol rate 2	The code can be found in the information letter.
QAM modulation 1 QAM modulation 2	The code can be found in the information letter.

 
- Press **«OK»** to proceed. The automatic search process will then start.

STEP 8



- Wait until the channel search process has finished. **Please note that this process can take up to 10 minutes to complete.**
- Press **«OK»** to proceed.
- **Alternatively:** you may be asked to search for the satellite. **Please skip** this step by pressing the appropriate button.

STEP 9

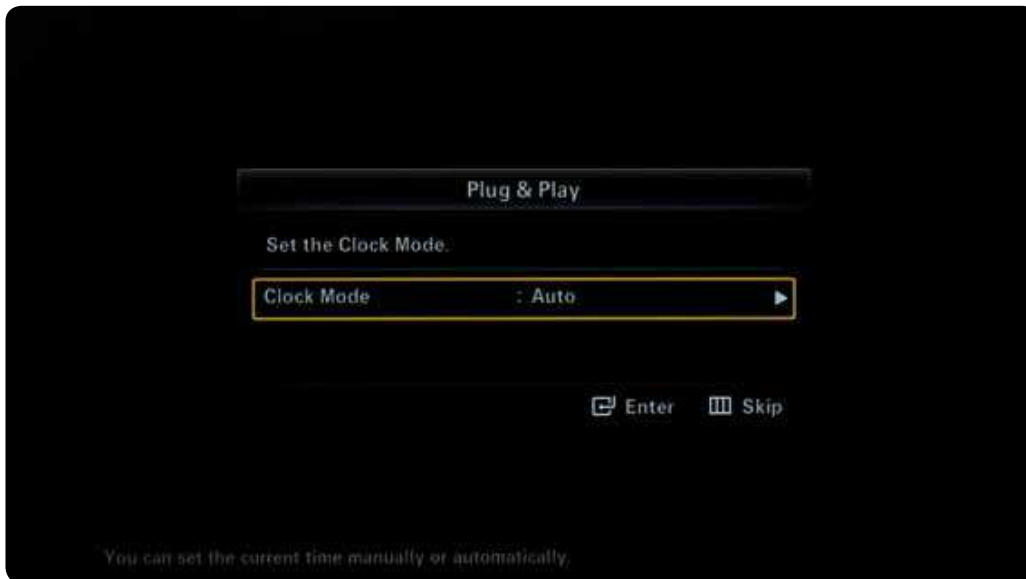

- Select the menu item «Clock mode», then select your desired settings or leave the manufacturer's default settings on Auto. [Further information can be found in the operating instructions of your TV set.](#)

STEP 10



- You will be asked to read through the installation instructions for set-top boxes. **Please skip** this step by pressing the appropriate button.

STEP 11



- Select the option «**Watch TV**» via the menu item «**Enjoy your TV**». Confirm your selection using the appropriate button.
- **Now insert the DigiCard** and follow the instructions provided in the DigiCard manual.
- Switch your TV set off and then back on.
- Wait for the automatic authentication process to finish.
- The first channel will be configured automatically.

You can now start enjoying some great entertainment with Digital TV.