

 
DigiCard Installation - Sharp TV Sets

Follow these instructions to install the DigiCard in a Sharp TV set. Please ensure your TV set is connected to the cable network and plugged in to the mains socket. You will need the DigiCard case provided with this manual for the installation as well as the «Digital TV information letter». This letter contains all required installation parameters.

All items of information regarding hardware and software can be found in the operating instructions of your TV set. The software and each installation stage can vary depending on the model and year of manufacture. upc cablecom assumes no liability whatsoever for any faults on your TV set. In that case, kindly contact the manufacturer directly.



STEP 1

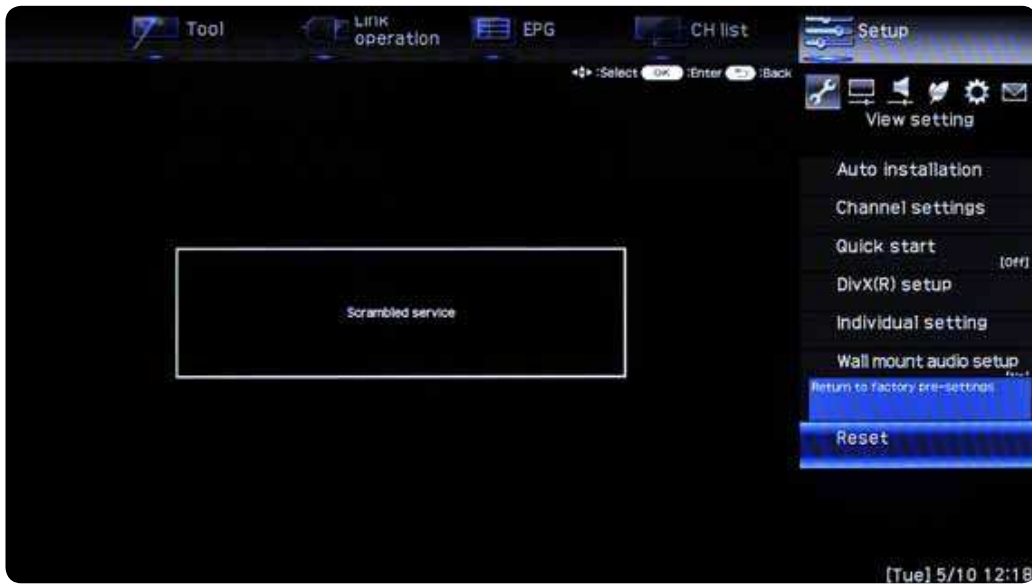

- **Do not** insert the DigiCard into your TV set **yet**. Switch on the TV.
- Press the **«MENU»** button on your remote control. The main menu will appear.
- Select the menu item **«Setup»** using your remote control. Confirm your selection by pressing **«OK»**.
- Select the menu item **«Picture settings»** using your remote control. Confirm your selection by pressing **«OK»**.
- Select the menu item **«Reset»** using your remote control. Confirm your selection by pressing **«OK»**. **Please note that any current settings will be lost.**

STEP 2



- Enter the security PIN code using your remote control (number pad). Confirm your selection by pressing **«OK»**. The default pin code is 1234.

STEP 3



 
- Select the option **«Yes»** via the menu item **«Pre-Settings»**. Confirm your selection by pressing **«OK»**.

STEP 4




- Select the option «Yes» via the menu item «Automatic restart». Confirm your selection by pressing «OK».
- The TV set will switch itself off automatically. Turn the TV back on after approximately 1 minute.

STEP 5

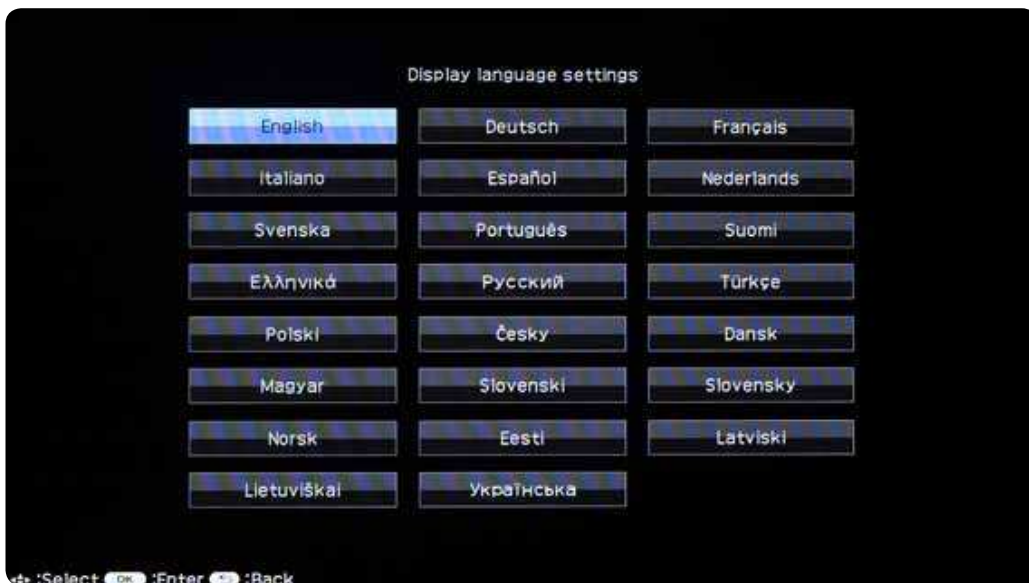

- Select the desired language. Confirm your selection by pressing «OK».

 STEP 6

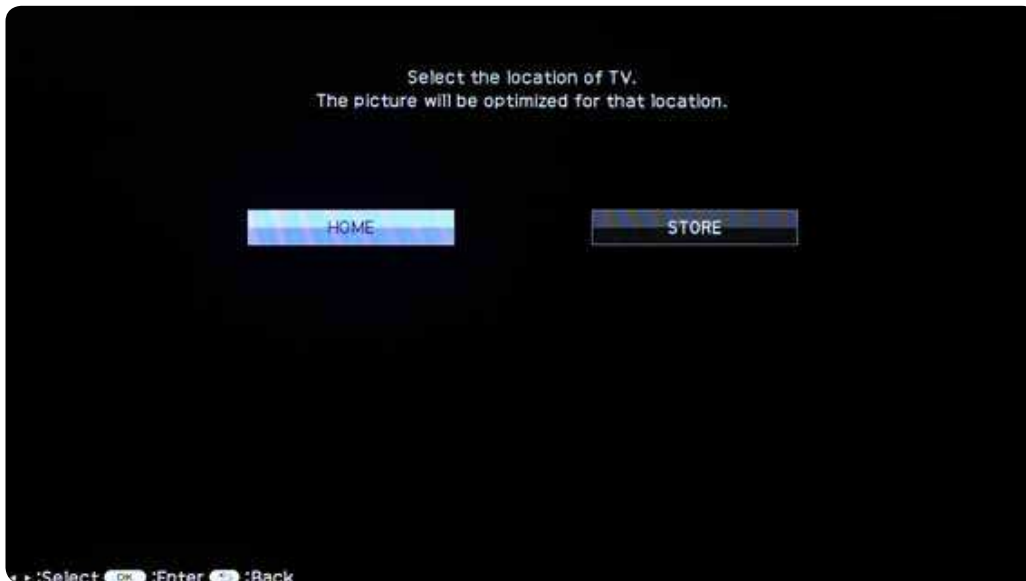


- Select the option «HOME» via the menu item «TV location». Confirm your selection by pressing «OK».

STEP 7



- Select the desired **country**. Confirm your selection by pressing «OK».

 STEP 8

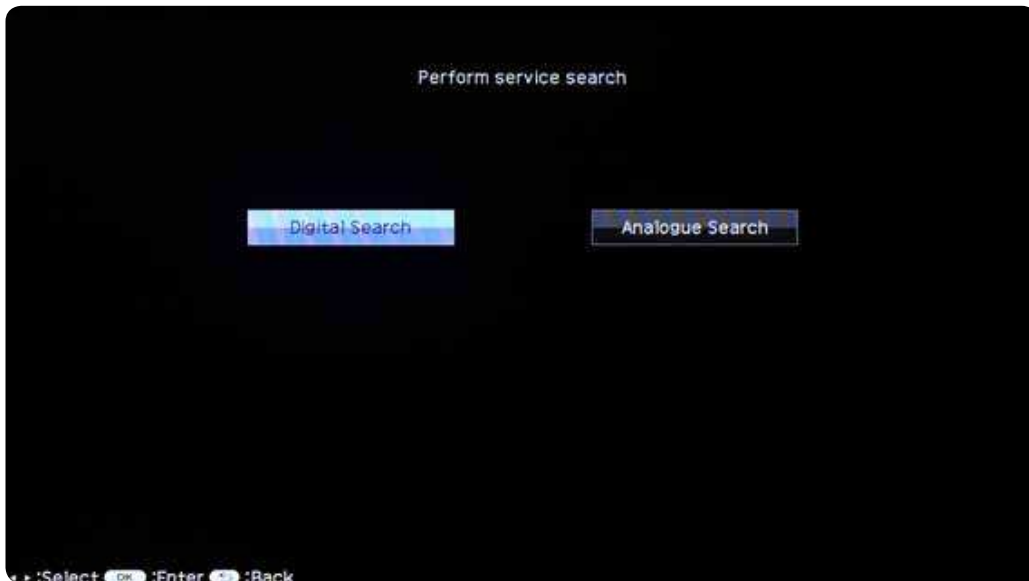

- Select the option «Digital search» via the menu item «Service». Confirm your selection by pressing «OK».

STEP 9



- Select the option «Cable» via the menu item «Digital search». Confirm your selection by pressing «OK».

STEP 10




- Ensure you have the **Digital TV information letter** at hand, which was provided with your DigiCard. You will find all required parameters on the Digital TV information card.
- Select the various options using the arrow keys on your remote control and enter the numerical values using the number pad.

| | |
|--------------------------------------|---|
| Encoded programme | Yes |
| Search method | Fast |
| Start frequency (MHz or KHz) | Both codes can be found in the information letter |
| Network ID | The code can be found in the information letter. |
| Symbol rate 1 Symbol rate 2 | The code can be found in the information letter. |
| QAM modulation 1 QAM modulation 2 | The code can be found in the information letter. |

- Press **«OK»** to proceed. The automatic search process will then start.

 STEP 11

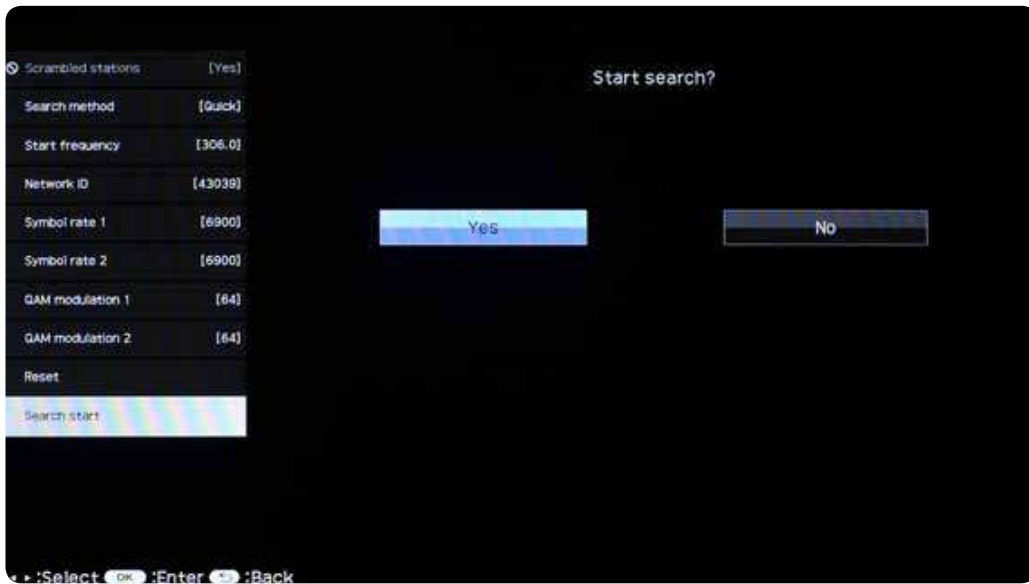

- Select the option «Yes» via the menu item «Start search». Confirm your selection using the appropriate button.
- Wait until the channel search process has finished. [Please note that this process can take up to 10 minutes to complete.](#)
- Switch your TV set off and then back on.
- **Now insert the DigiCard** and follow the instructions provided in the DigiCard manual.
- Switch your TV set off and then back on.
- Wait for the automatic authentication process to finish.
- The first channel will be configured automatically.

[You can now start enjoying some great entertainment with Digital TV.](#)