

6

SONY

 
DigiCard Installation - Sony TV Sets

Follow these instructions to install the DigiCard in a Sony TV set. Please ensure your TV set is connected to the cable network and plugged in to the mains socket. You will need the DigiCard case provided with this manual for the installation as well as the «Digital TV information letter». This letter contains all required installation parameters.

All items of information regarding hardware and software can be found in the operating instructions of your TV set. The software and each installation stage can vary depending on the model and year of manufacture. upc cablecom assumes no liability whatsoever for any faults on your TV set. In that case, kindly contact the manufacturer directly.



STEP 1

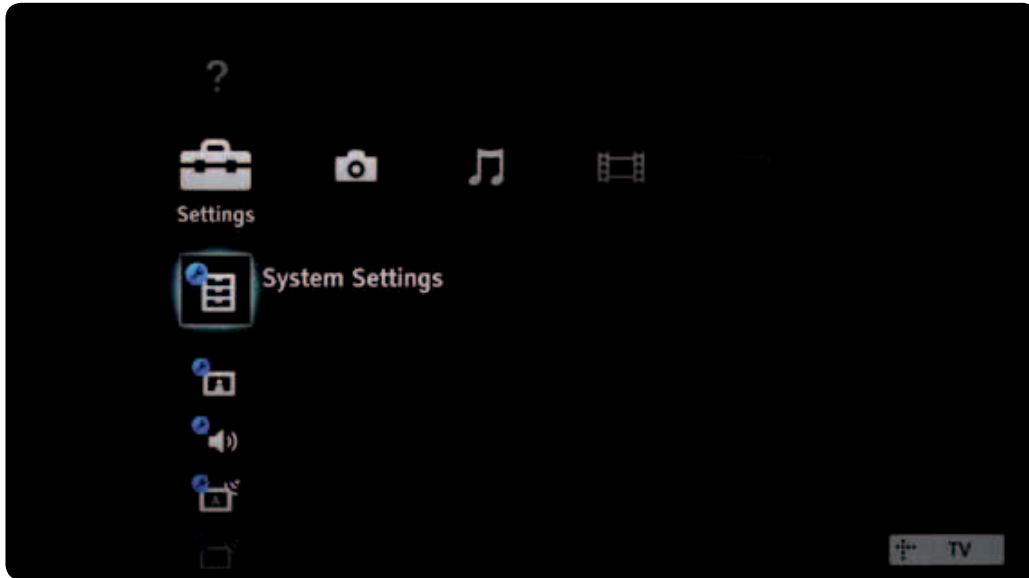

- **Do not** insert the DigiCard into your TV set **yet**. Switch on the TV.
- Press the **«HOME»** button on your remote control. The main menu will appear.
- Select the option **«System settings»** via the menu item **«Settings»**. Confirm your selection using the appropriate button.

STEP 2



- Select the option **«New installation»** via the menu item **«Auto Start-up»**. Confirm your selection using the appropriate button.

STEP 3



- Select the option «Yes» via the menu item «Start Auto Start-up?». Confirm your selection using the appropriate button. Please note that any current settings will be lost.

STEP 4



 
- Select the desired language. Confirm your selection using the appropriate button.

STEP 5




- Select the desired **country**. Confirm your selection using the appropriate button.

STEP 6

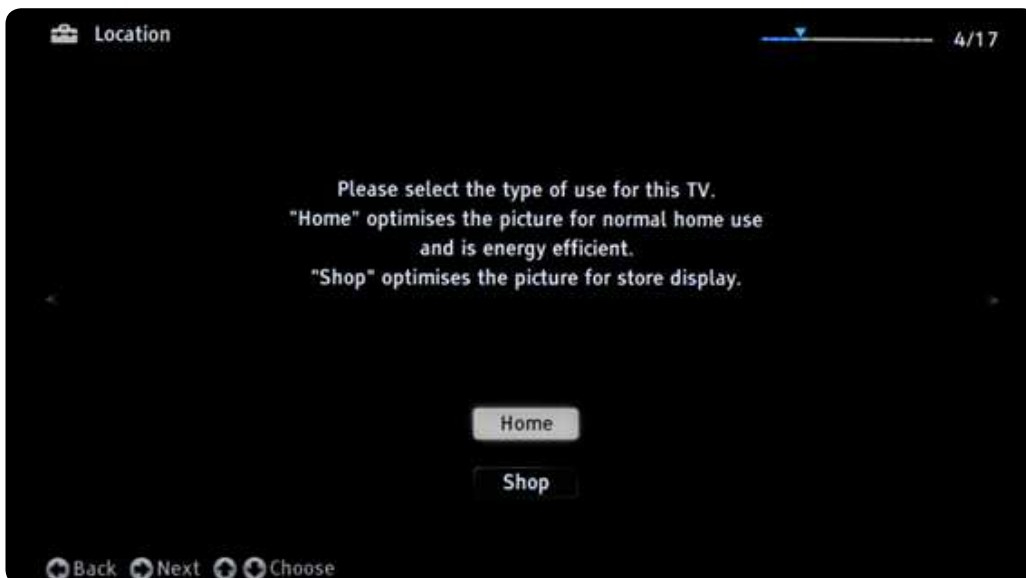


- Select the option **«HOME»** via the menu item **«Type of use»**. Confirm your selection using the appropriate button.

 STEP 7

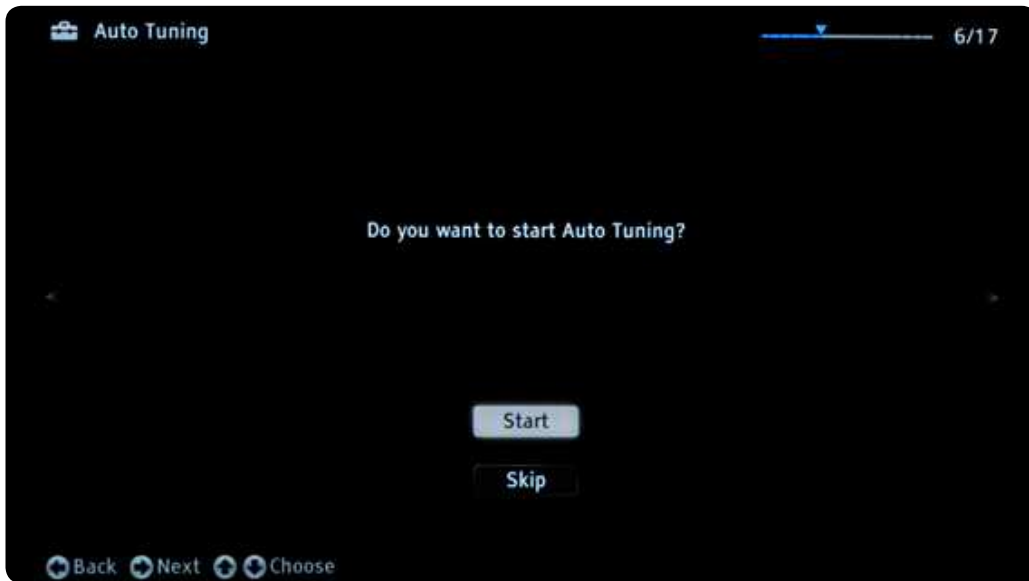

- Select the option «Start» via the menu item «Start Auto Tuning». Confirm your selection using the appropriate button.

 STEP 8

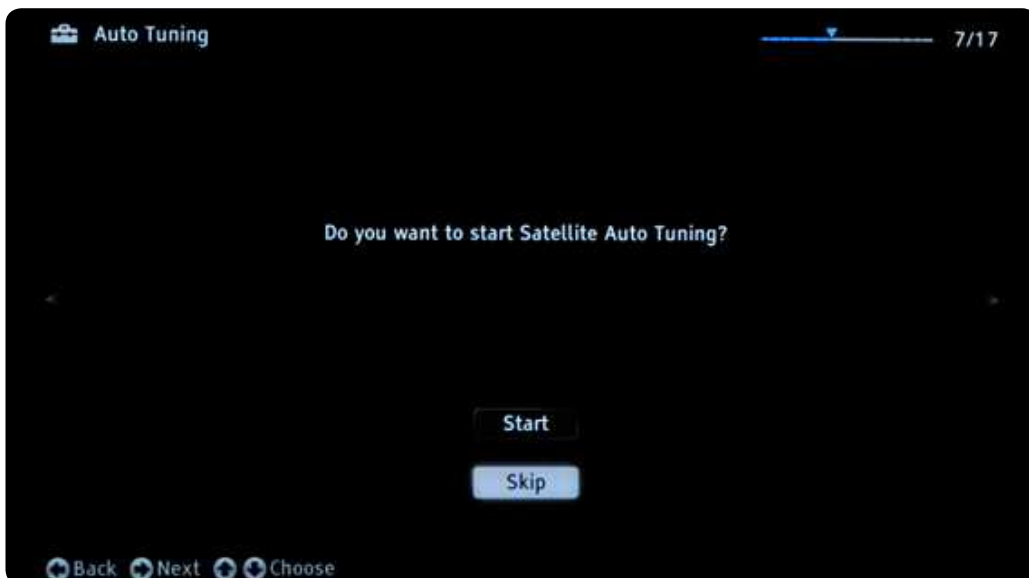


- Select the option «Skip» via the menu item «Start satellite Auto Tuning?». Confirm your selection using the appropriate button.

STEP 9



- Select the option «**Start**» via the menu item «**Start Digital Auto Tuning**». Confirm your selection using the appropriate button.

 STEP 10

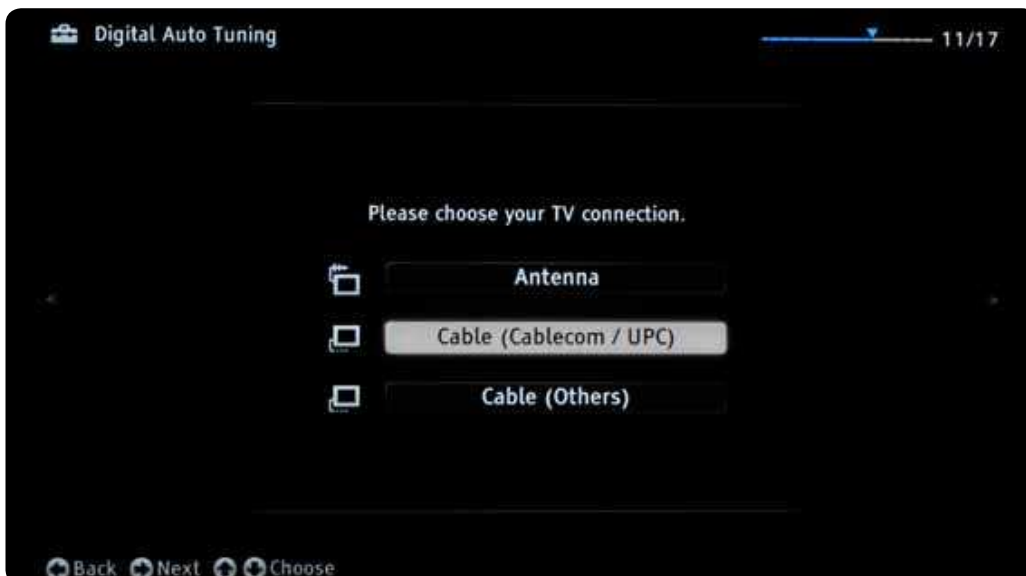

- Select the option «**Cable (Cablecom / UPC)**» via the menu item «**TV connection**». Confirm your selection using the appropriate button.

STEP 11




- Ensure you have the **Digital TV information letter** at hand, which was provided with your DigiCard. You will find all required parameters on the Digital TV information card.
- Select the various options using the arrow keys on your remote control and enter the numerical values using the number pad.

Channel type	All channels
Start frequency (MHz or KHz)	Both codes can be found in the information letter.
Network ID	The code can be found in the information letter.
Symbol rate 1 Symbol rate 2	The code can be found in the information letter.
QAM modulation 1 QAM modulation 2	The code can be found in the information letter.


- Press the appropriate button to start the automatic search process.

 STEP 12

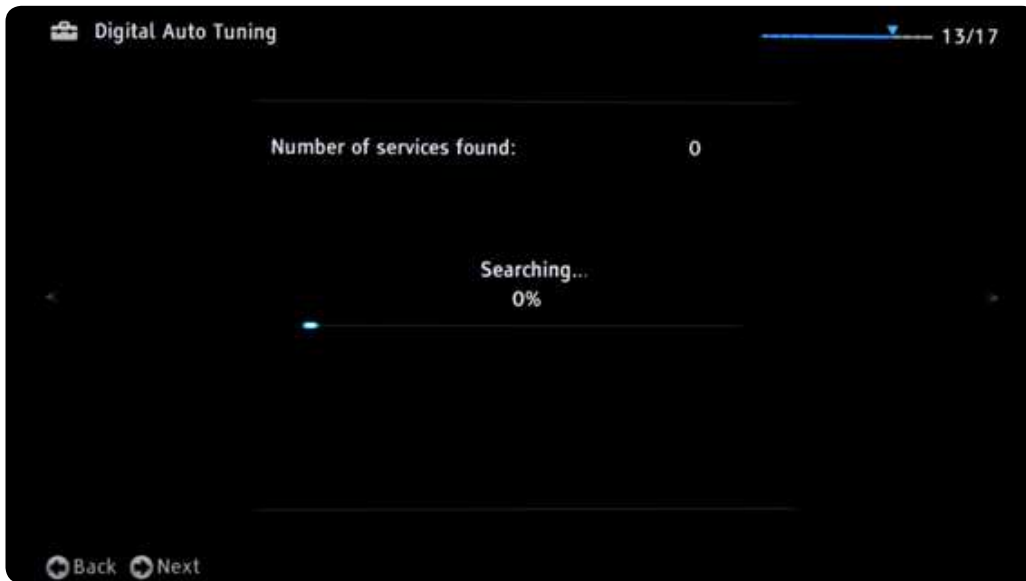


- Wait until the channel search process has finished. [Please note that this process can take up to 10 minutes to complete.](#) The analogue channels will now be displayed.

 STEP 13

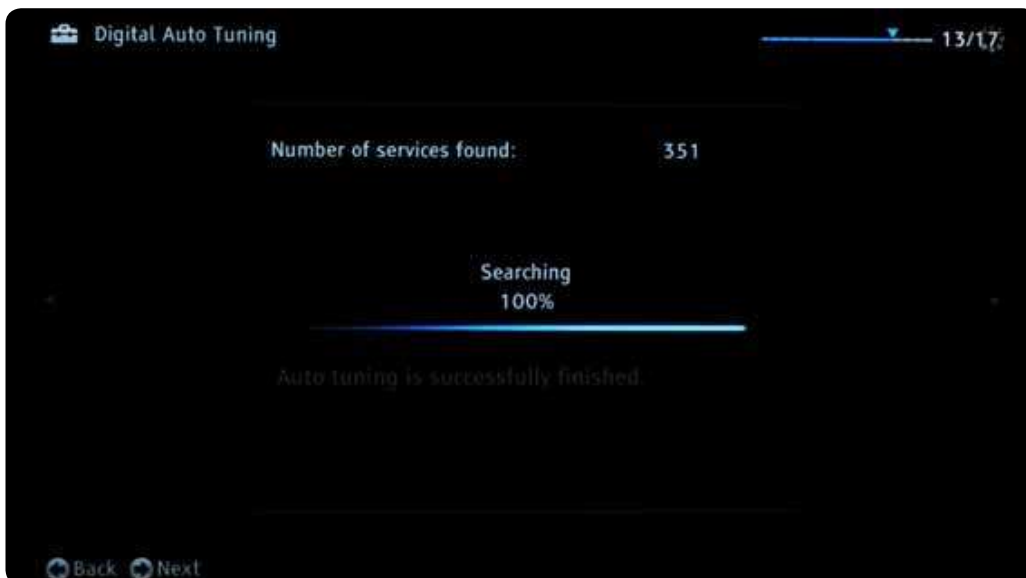

- **Now insert the DigiCard** and follow the instructions provided in the DigiCard manual.
- Switch your TV set off and then back on.
- Wait for the automatic authentication process to finish.

 STEP 14

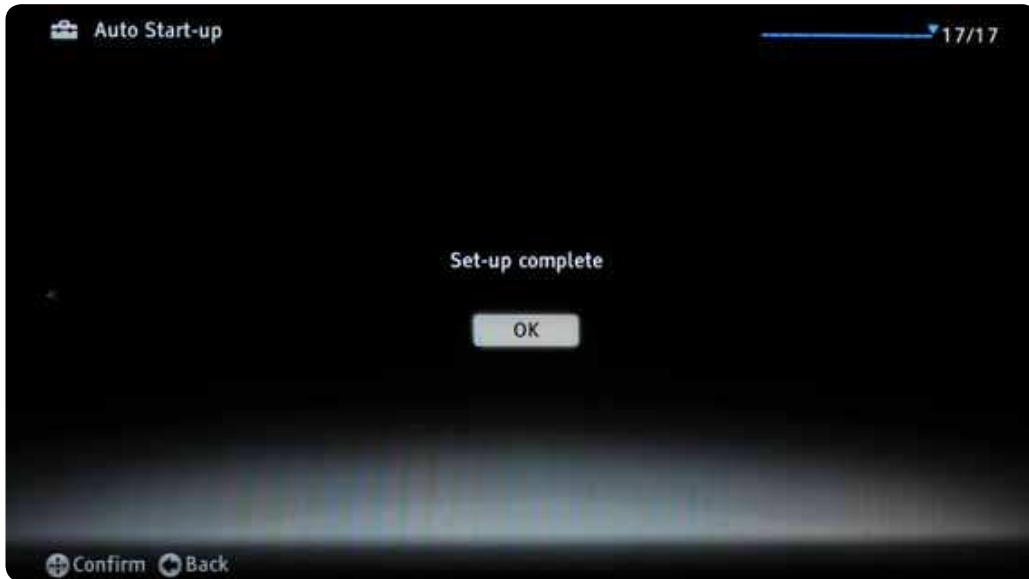

- The first channel will be configured automatically. Press the **«HOME»** button on your remote control. The main menu will appear, select the option **«Digital»**.

You can now start enjoying some great entertainment with Digital TV.