


Power saver settings

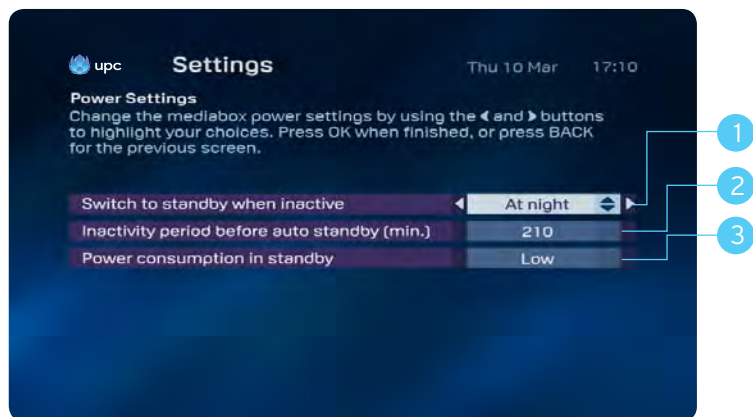

You can select the following power saver settings in this menu:


1. If the On option is selected, the Mediabox switches to power saver mode when inactive.
 - If the Night option is selected, the Mediabox switches to power saver mode when inactive from 11 pm onwards. The Night option covers the period from 11 pm to 5 am.
 - Select the Off option to deactivate power saver mode entirely.
2. Here you can set how long (in minutes) the Mediabox may remain inactive before automatically switching to power saver mode. Maximum setting: 240 minutes.
3. Power consumption in standby can also be set. You can choose between high or low.
 - High: Mediabox power consumption in standby is around 8 watts (restart in 3-5 seconds).
 - Low: Mediabox power consumption in standby is around 1 watt (restart in 30-50 seconds).

Note:

If you have programmed recordings, the Mediabox activates automatically from standby and starts recording. The Mediabox also activates automatically from standby for tasks like software upgrades etc. These routines never last longer than 2 hours after which the Mediabox switches back to standby.

Network search

In the network search settings you can manually or automatically search channels.

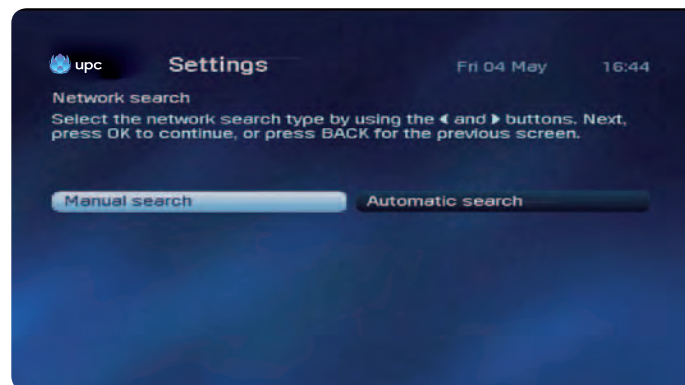

1. Enter your PIN code and then press (OK button) ok. The default PIN code is 1234.
2. Choose whether you want to run a manual or automatic search by pressing ◀ or ▶ button.
3. Press (OK) to start the network search.

Note:

Please make sure you have your activation code. The activation code can be found on your welcome letter, your Digital TV Infocard or on upc-cablecom.ch/setupid.